X-Carve User Guide and Operations

SLQ Wiki Fabrication Lab 2025/07/18 17:24

X-Carve User Guide and Operations

Basics

~~REVEAL~~

Safety

Basics

- **Don't put hands in machine.** It hurts to have fingers cut off.
- Wear clothes. It'd distracting to other users and against policy.
- No loose clothing or long hair That really was a nice tshirt or scalp...
- Don't cut anything you don't own. Think about how you would feel if it was your thing.

Required PPE

- Hearing protection It's a better story to loose it at a rock concert than operating this machine
- Eye protection The replacement ones are awful. It's not worth it.
- **Covered Shoes** Something you should be wearing anyway.

Optional

- **Respirator** Looks scary and protects your lungs.
- All over body condom You can never be too safe.

Line Edge 2025/07/18 17:24

Material Recommendations

Best

- Soft plastics
 - $\circ \ \text{HDPE}$
 - \circ LDPE
- foams.
 - Dence Polystyrene
 - Light weight polystyrene
 - Expanded PVC
- Cork.

Noisy

- Hard plastics
 - $\circ \ \text{Acrylic}$
- Wood
 - Plywood
 - Pine

Avoid

- Solid PVC (Tends to clog bits)
- Leather (Fibrous. Cuts but clogs bits. Stinks.)

Tooling and cutting speeds

Operations

Machine start and verify basic operation

- 1. Ensure work space is clear of tools, etc.
- 2. To activate the machine, 'STOP' button needs to be lit up green, if this is not the case, turn red knob clockwise(direction arrows) until it pops up.

X-Carve User Guide and Operations







3. Open or switch to Candle(Machine control software).



4. Verify 'Machine Status' does **NOT** say 'Not Connected' ('Alarm' or 'Idle' is OK), if not contact Supervisor.

| | Good: | Status: | Idle | | Status: | | Alarm | Bad: |
|----|--|---------|--------------|--|---------|--------|-------|------|
| | Status | : N | ot connected | | | | | |
| 5. | Press 'Reset' above the Emergency Stop button. | | | | | | | |
| 6. | Press 'Home' Machine will move to find end stops. | | | | | | | |
| 7. | Status should flash green 'Home' then display 'İdle', if not or if the machine makes grinding noises, doesn't home or has other problems contact Supervisor. | | | | | | | |
| | Good: | Status: | Idle | | Bad: | tatus: | Alarm | |

SLQ Wiki

5/5

X-Carve User Guide and Operations

Installing and change of tooling

Loading and running a job

Post-use shutdown