




# Slim Chair

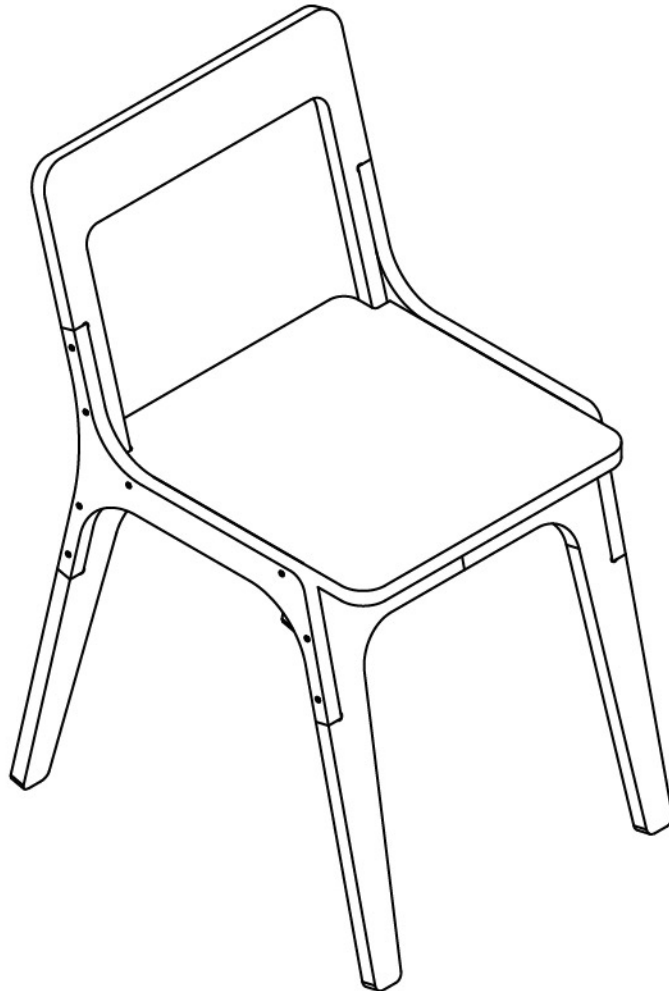

Range: Regaliz  
Designed by: Jose Pacheco

*Downloaded by Abe on  
2017-11-29 for non-commercial use.*

opendesk

twitter @open\_desk  
opendesk.cc

YOUR PRODUCT'S UNIQUE CODE




# PRODUCT ASSEMBLY INSTRUCTIONS

PRODUCT: SLIM CHAIR  
RANGE: REGALIZ  
DESIGNERS: JOSE PACHECO  
PUBLISHED: 30 / 05 / 17  
PRODUCT VERSION: 3\_0\_0


## HARDWARE & TOOLS REQUIRED:

- CLAMPS
- DRILL
- 3MM DRILL BIT
- DRIVER
- 24x 4.5x30MM SCREWS


## 1. PARTS

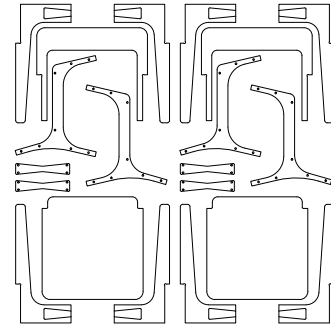


## 2. PRE-DRILL & SCREW TOGETHER BOTH SETS OF LEGS

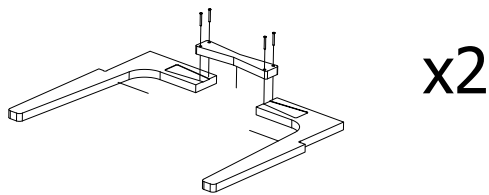


## 3. PRE-DRILL & SCREW TOGETHER THE LEGS SIDES

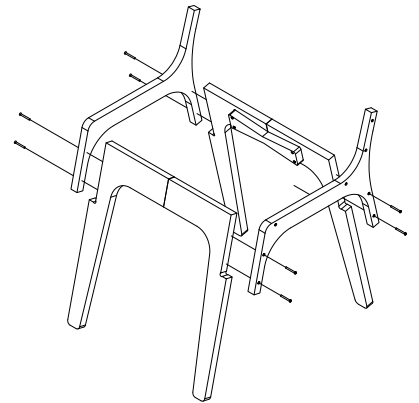


## 4. PRE-DRILL & SCREW THE BACKREST

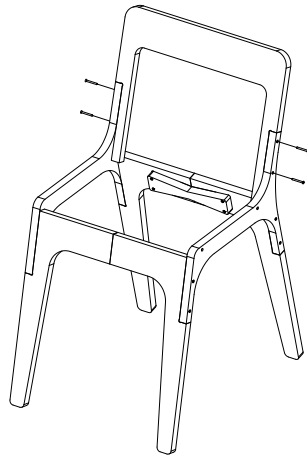

## 5. PRE-DRILL & SCREW THE SEAT IN PLACE

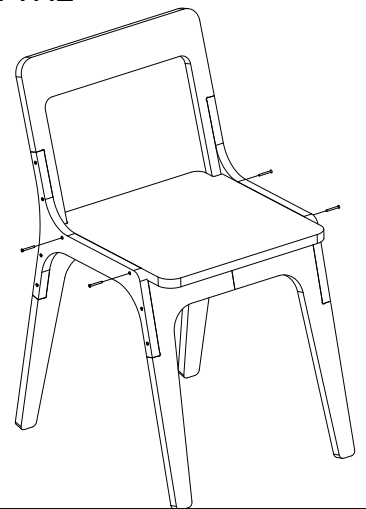

## 6. CHECK FOR BALANCE

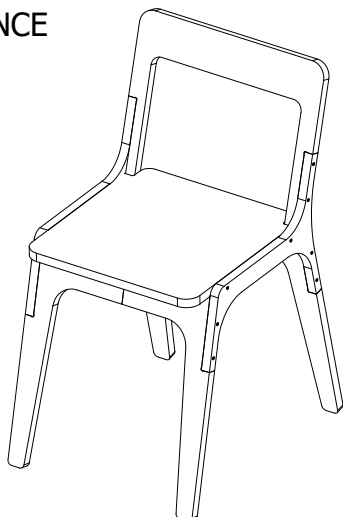



## **Slim Chair Assembly Instructions:**

### **Parts:**

1x Seat  
1x Backrest  
1x Front Leg  
1x Back Leg  
2x Leg Plates  
2x Side Panels  
24x 30mm Screws

### **Tools:**

Clamps  
Drill  
3mm Drill Bit  
Driver

### **Standard Steps:**

1. Seat - S/O
2. Backrest - S/O
3. Front Legs - S/O
4. Back Legs - S/O
5. Side Panel - S/O
6. Leg Plates 'Bowties' - S/O
7. Assemble
8. Check

1. With 240 grit sand the edges all the way round then the faces. Wipe off dust. Make sure you sand each end smoothly. Oil in the same order. Wipe off any excess oil and put to one side.

2. Same as step 1.

3. Same as step 1.

4. Same as step 1.

5. Same as step 1.

6. Same as step 1.

7. On a clean workbench, Lay the four leg parts out with the two 'bow ties'. Add a bowtie to one side of a leg where there is a half bowtie pocket and screw together. With the mirrored leg part do the same again. Repeat on the second leg. Next, line up and clamp the right side panel to the right side of the front leg and the right side of the back leg. Drill through the four holes on each side of the side panel into the front and back legs, deep enough to allow the screw to

pull through. Add the screws to all four holes. Position the backrest in the same way on the side panel and clamp, go through the same process as the legs. Remove the clamps and flip the frame over, do the same again. Put the frame on it's feet. Position the seat into the frame and go through the same process with the screws in the sides.

8. On the workbench check for balance and stability.

#### **Estimated Timings for Standard Steps**

1. Seat - S/O	5-7 min
2. Backrest - S/O	8-12 min
3. Front Legs - S/O	5-7 min
4. Back Legs - S/O	5-7 min
5. Side Panel - S/O	5-8 min
6. Brace Bars - S/O	4-6 min
7. Assemble	10-15 min
8. Check	1 min
<b>Total:</b>	<b>43-63 min</b>

#### **Actual Timings from Standard Steps**

1. Seat - S/O	5 min
2. Backrest - S/O	9 min
3. Front Legs - S/O	6 min
4. Back Legs - S/O	6 min
5. Side Panel - S/O	7min
6. Brace Bars - S/O	4 min
7. Assemble	12 min
8. Check	1 min
<b>Total:</b>	<b>50min</b>