
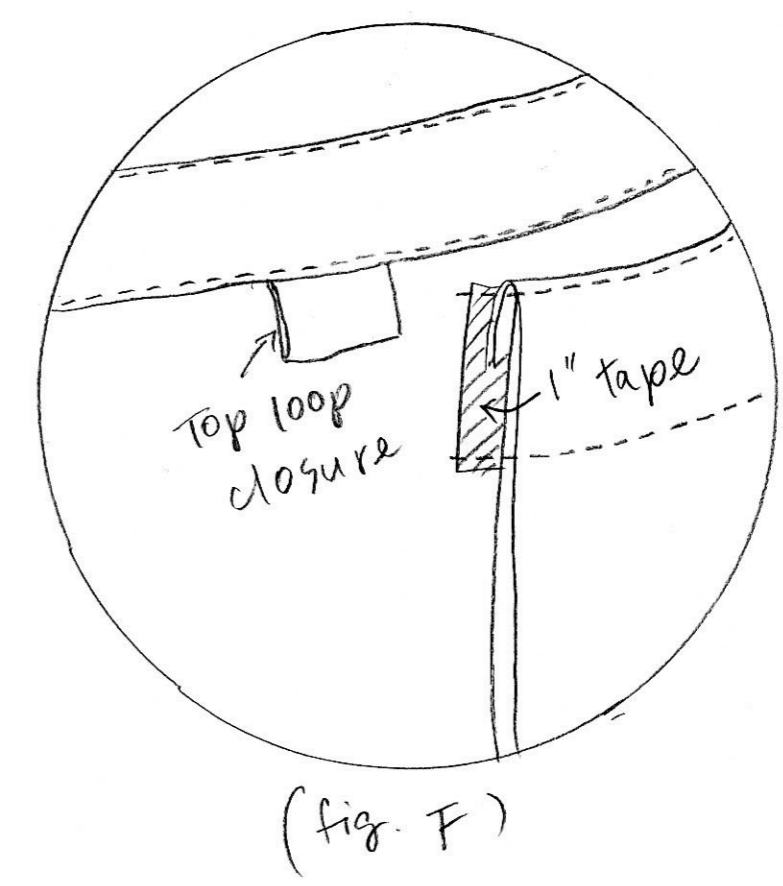
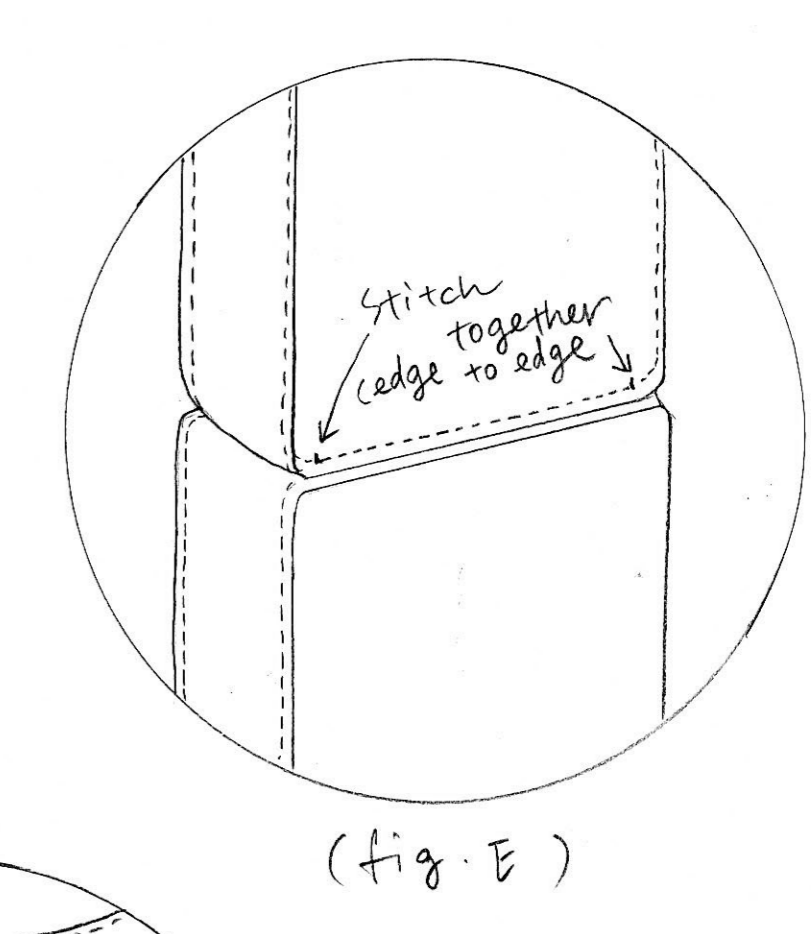
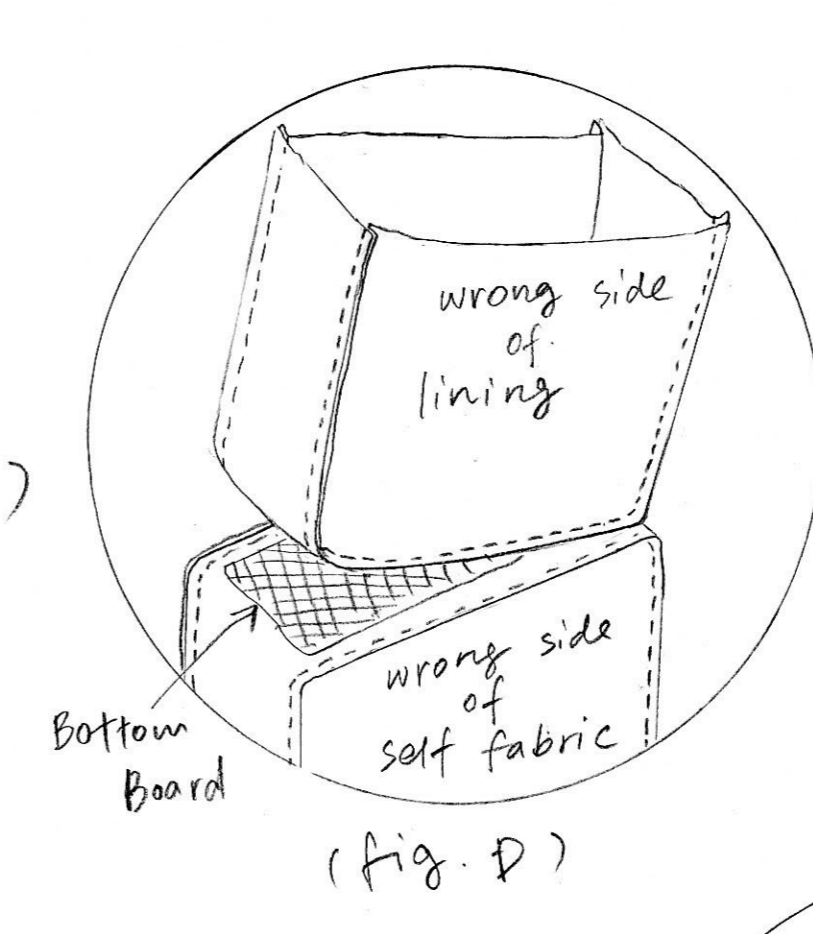
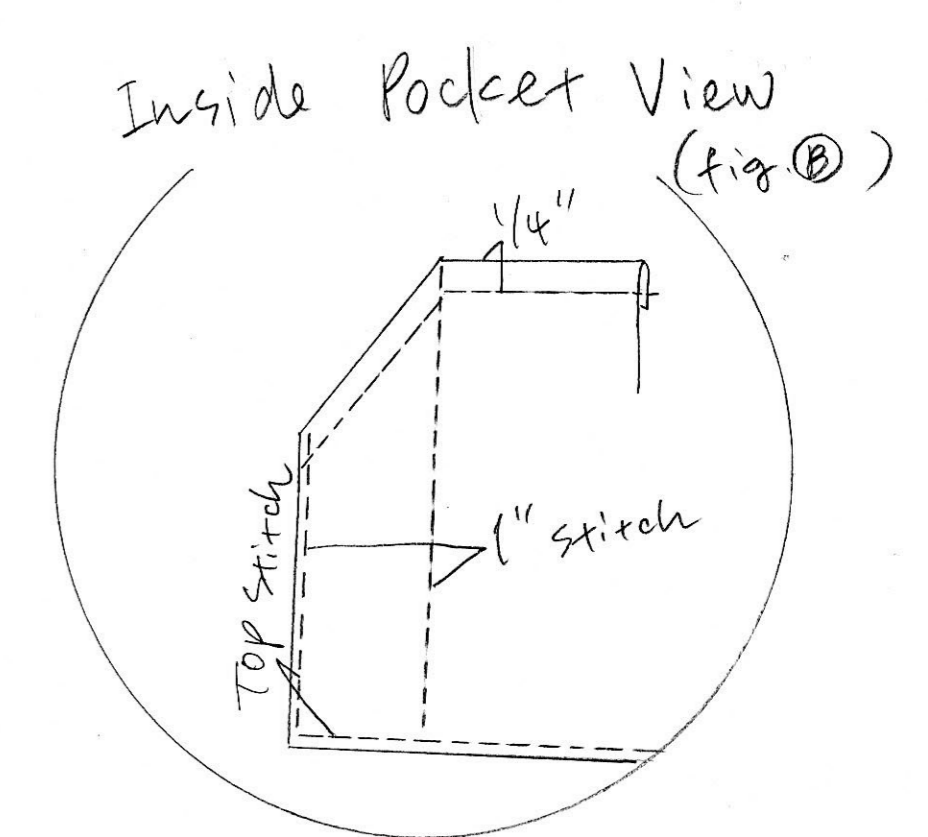


- What you need**
- o Self Fabric
  - o Lining Fabric
  - o 1 3/4" wide webbing x 1.5 yd for handles (cut 43" long x 2)
  - o 1" wide x 7" tape for the top closure
  - o 1" wide hook & loop x 7"
  - o 1" wide tape x 1.5 yd for the top opening & pocket opening
  - o 5 1/2" x 15" Bottom Board
  - o 1 of metal hook

- \*Preparation**
- cut all parts (3/8" seam Allowance are included)
  - Attach 2 of "Hook & Loop" to the front panel. Sew all around.
  - Make two handles & attach to the front panels (see fig. D)
  - Finish top of the outside pockets with 1" tape (see fig. E)
  - Make an inside pocket & attach to the front panel (see fig. F)

- \*Construction steps**
1. Attach the outside pockets to the main panels by sewing in the middle of the pockets, then fold (see fig. D)
  2. Sew main panel and side panel together to form a bucket. (both self and lining.) Keep the wrong side out.
  3. Sandwich Bottoms, then sew both bottoms together. (see fig. D & E)
  4. Turn the outer bag the right way out, drop the inner bag into it.
  5. Bind the metal hook & tape with 1" tape, then finish the top opening. (see fig. F)

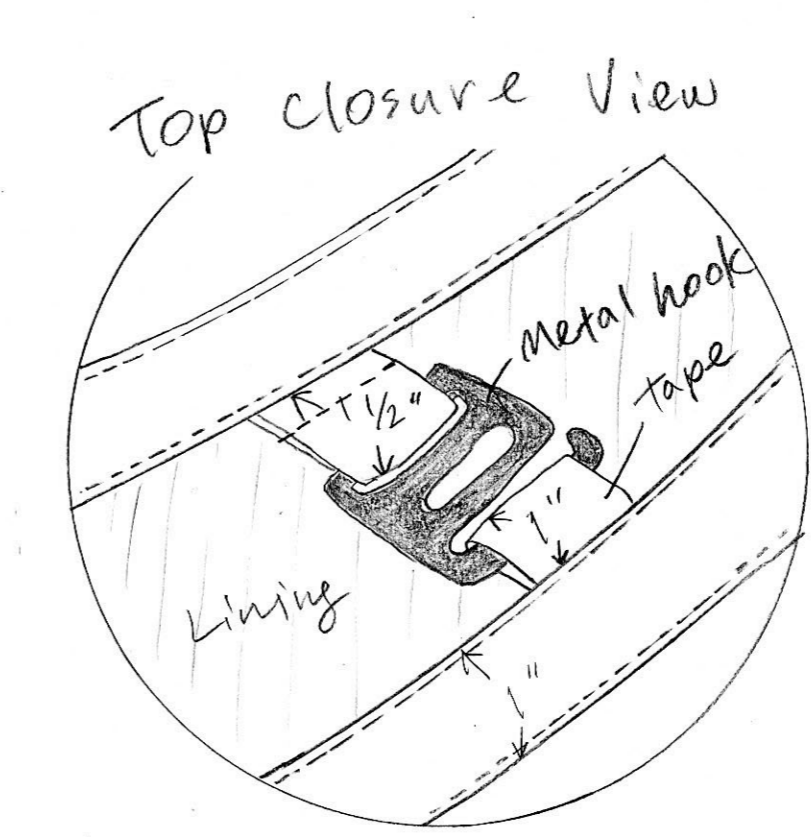

STAY OBSESSED!!